

19" HD-Ready Wide-Screen LCD TV
FLM-1911, FLM-1911M, FLA-1911B



PARTS AND EXPLODED VIEWS



20060526

7. Spare Parts List by Model Number

Polaroid FLM-1911/1911M Part List		
Exploded View Location	Part Number	Description
	600-181-3200-LIH	AC Power Cord
	621-181-60002H	Audio Cable
	621-181-2000H	Composite Video Cable
	621-181-3020P-1H	Component Cable
	845-A34-P90PH	Remote Control
Page /Number 7	909-GC0-JK195XUH	Control Box Assembly
Page /Number 6	705-590-G05CH	19" LCD Panel
Page /Number 4	151-A01-P90UPH	Front Bezel Black/Silver
Page /Number 18	151-001-P907GH	Rear Cabinet Black
Page /Number 14	151-700-JP195XUH	Stand Assembly Silver
Page /Number 5	824-005-JK195H	Speaker (right or Left)
Page /Number 3	899-A00-JK195XUH	Front Control Button/IR Board
Page /Number 2	154-003-JP195H	Front Control Buttons Silver
Not Shown	899-000-JK195XUH	Front/Side Earphone Board
Not Shown	631-A26-JK195H	LVDS Cable

8. Exploded Diagrams

